

**HD202B  
Addressable Heat Detector**



**Before Installing**

**NOTICE:** This manual should be left with the owner/user of this equipment.

**IMPORTANT:** This detector used with the HD10X base must be tested and maintained regularly following NFPA 72 requirements. The detector should be cleaned at least once a year.

**General Description**

This detector can be used in all areas where heat detector is required. It is suited for fires ranging from smoldering to flaming fires.

This detector is designed to provide open area protection and to be used with HST series addressable fire alarm control panel. Two LEDs on each detector provide local 360° visible for indication of status. In the normal condition the LEDs flash red every scan time of panel. When the detector senses heat and goes into alarm the LEDs will latch on red.


The alarm can be reset only by a momentary power interruption.

**Base Terminals**

No.	Function
1	Remote Indicator (-)
2	Remote Indicator (+)
3	Loop (-)
4	Loop (+)

**Specifications**

Operating Voltage Range:	16 to 28VDC Volts
Standby Current:	320µA @ 28 VDC(Maximum)
Alarm Current (LED on: )	5mA @ 28 VDC(Maximum)
Temperature Class:	A2R
Operating Temperature Range:	14°F to 122°F (-10°C to 50°C)
Operating Humidity Range:	10% to 93% Relative Humidity, Non-condensing
Height:	2.2" (55 mm) installed in Base
Diameter:	4.0" (103 mm)
Weight:	5.5 oz. (155 g)
Color & Material	White/ ABS
Bases	HD10X
Compatible control panels	HST series addressable fire alarm control panel

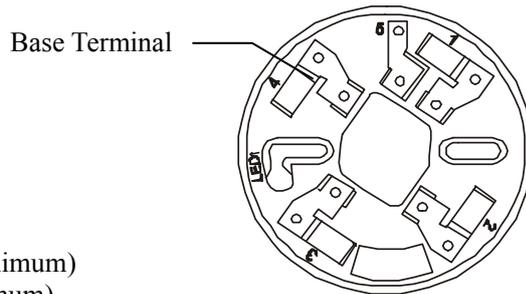

**Figure 1. Terminal layout of HD10X base**


**Installation Guidelines (See Figure 2)**

All wiring must be installed in compliance with the local codes having jurisdiction. Proper wire gauges should be used. The conductors used to connect heat detectors to control panels and accessory devices should be color-coded to reduce the likelihood of wiring errors. Improper connections can prevent a system from responding properly in the event of a fire.

For signal wiring (the wiring between interconnected detectors), it is recommended that the wire be no smaller than 1.0 square mm. Wire sizes up to 2.5 square mm may be used with the base. For best system performance. The Loop (+) and Loop(-) wires should be twisted pair and installed in separate grounded conduit to protect the loop from extraneous electrical interference.

Heat detector and fire alarm system control panels have specifications for allowable loop resistance. Consult the control panel manufacturer's for the total loop resistance allowed for the particular model control panel being used before are made by simply stripping about 3/8 inches (9.5 mm) insulation from the end of the wire. Sliding the bare end of the wire under the clamping plate.


The wiring of the detector base should be checked before the detector heads are installed in them. The wiring should be checked for continuity ,polarity in the base, and dielectric tests.

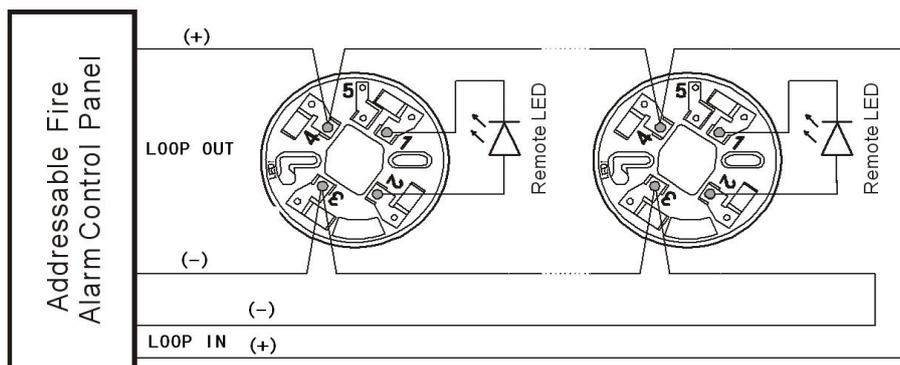

**Figure 2. Typical wiring diagram**

**Note:** Maximum wiring resistance is 50 ohms.

**Note:** During the installation, Make the rib of the detector align with the rib on the base until it drops into place.  
(see figure 3)

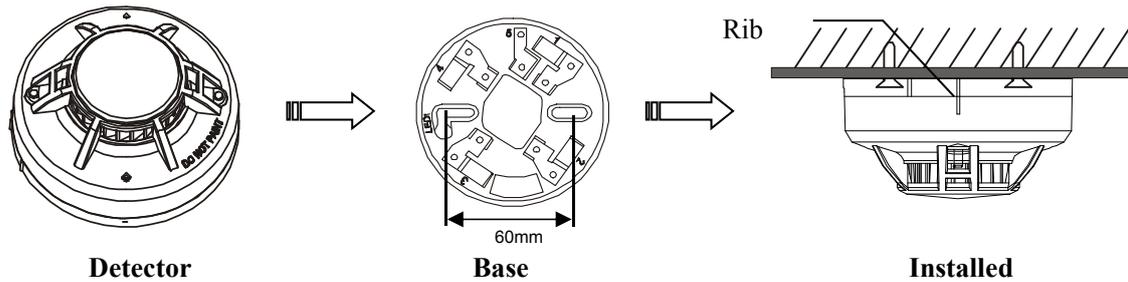

**Figure 3. Install the detector**

**Note:** Dust covers are an effective way to limit the entry of dust into smoke detector sensing chambers. However, they may not completely prevent airborne dust particles from entering the detector. Therefore, We recommends the removal of detectors before beginning construction or other dust producing activity.

Be sure to remove the dust covers from any sensors that were left in place during construction as part of returning the system to service.

### **Remote LED**

The remote indicator is connected between terminals 1 and 4 as showing Figure 2. The remote indicator must be current limited to 20mA @24V. Maximum. Not limiting current could result in damage to the detector or cause a no alarm condition.

### **Tamper-Resistance**

The detector include a tamper-resistant capability that prevents their removal from the bracket without the use of a tool.

### **Testing**

Before testing, notify the proper authorities that the system is undergoing maintenance, and will temporarily be out of service. Disable the system to prevent unwanted alarms.

All sensors must be tested after installation and periodically thereafter. Testing methods must satisfy the Authority Having Jurisdiction (AHJ). Sensors offer maximum performance when tested and maintained in compliance with NFPA 72.

The sensor can be tested in the following ways:

Direct Heat Method (Hair dryer of 1000 – 1500 watts)

1. From the side of the detector, direct the heat toward the sensor. Hold the heat source about 6 inches (15cm) away to prevent damage to the cover during testing.
2. The LEDs on the detector should light when the temperature at the detector reaches the alarm set point. If the LEDs fail to light, check the power to the detector and the wiring in the detector base.
3. Reset the detector at the system control panel.

Detectors that fail these tests should be cleaned as described under MAINTENANCE and retested. If the detectors still fail these tests they should be returned for repair.

### **Maintenance**

Before removing the detector, notify the proper authorities that the smoke detector system is undergoing maintenance and will be temporarily out of service.

1. Counterclockwise rotation detector, remove it from the mounting base is removed.
2. Remove the detector cover by pressing firmly on each of the four removal tabs that hold the cover in place.
3. Use a vacuum cleaner or compressed air to remove dust and debris from the heat sensor.
4. Replace the cover using the LEDs to align the cover and then gently pushing it until it locks into place.
5. Reinstall the detector.
6. Test the detector as described in TESTING.
7. Reconnect disabled circuits.
8. Notify the proper authorities that the system is back on line.

